
RhinoStretch Hand Stretcher Instructions



Assembly


Slide square nuts into the open channel that does not have glue in it. Tighten bolts thru the handle into the square nuts.

Operating Instructions

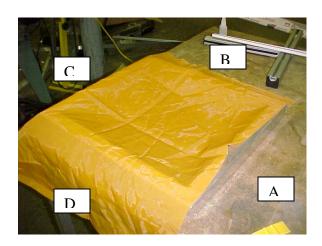

Use a table to stretch a screen. Place the frame near the edge.

Cut the fabric, leaving 3" for the B, C & D sides. You could actually stretch off the roll and only cut the fabric when your done stretching.

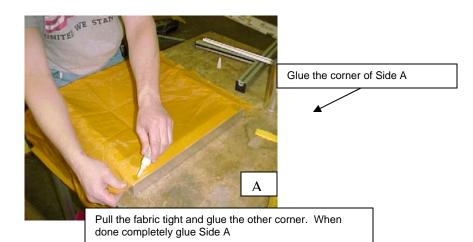

Place the Hand Stretcher under the fabric and lock down with the plastic insert.

Push down on the stretcher handle to begin stretching. If the corners appear to be tight, press down on the plastic insert to relieve the tension. Glue down Side C.



Clamp the frame to the table.
Leave the frame overhanging the edge.

Once Side C is done, release the Clamp and turn the frame to Side B or D

Stretch and glue both Sides B and D. Make sure to keep the corners soft when stretching to prevents tears.

